



# Aztec Instruction Sheet

**Pitching your tent for the first time: we recommend that you practice pitching your tent before you actually leave for your first trip.**


1. Choose a suitable pitching site by removing all sharp objects which may damage the groundsheet. Spread out the tent on the ground, making sure the door zippers are closed but the window zippers are at least partially open which lets air into the tent as you're setting it up. You can find 2 separate pole sets with hubs. Assemble each pole set separately, making sure all the pole sections slide completely together, then connect the 2 separate pole set completely. Please note that the bent pole ONLY for Axis 5

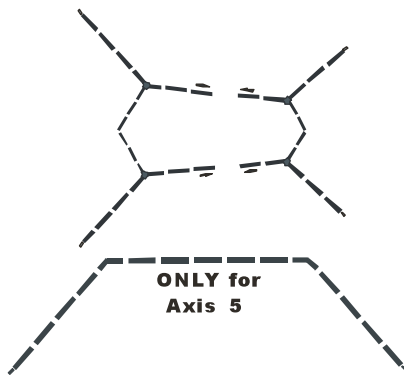


2. Lay the assembled pole sets on top of the tent. Place the pole tips into the grommets located at each corners of the tent. The taller "peak" should be at the front of the tent (for the main door). For the Axis 5 person tent only, place the bent pole tips into the grommets located on each side in the middle of the tent.

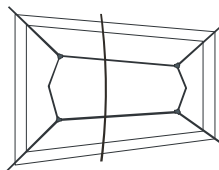

3. Attach the clips for the tent around the poles to assemble the tent.

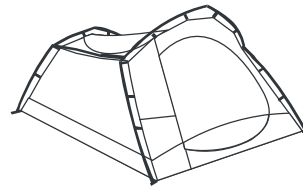

4. Lay the flysheet over the tent, making sure the vestibules are over the tent doors. The large vestibule should go at the front of the tent over the main door. Attach the buckle from each corner of the flysheet to the buckle at each tent corner. The webbing from the flysheet to the buckle can be adjusted to properly tension the flysheet. The flysheet should be snug, but not overly stretched. Place a tent peg at each tent corner.

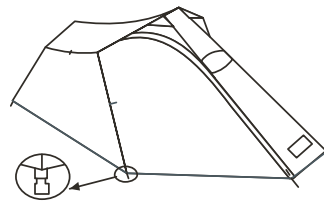

5. If the conditions are windy, or if you anticipate that it may become windy, it is advisable to attach the guy lines as shown in the sketch below. The most important guy lines are the ones on the side of the tent where the wind is blowing. Proper guying on the side of the wind will keep the tent from shifting around.

